


1018 Neon Solderless Connector Installation instruction


1.Preparation: Cut Neon strip




2.Install the transparent PC outer cover

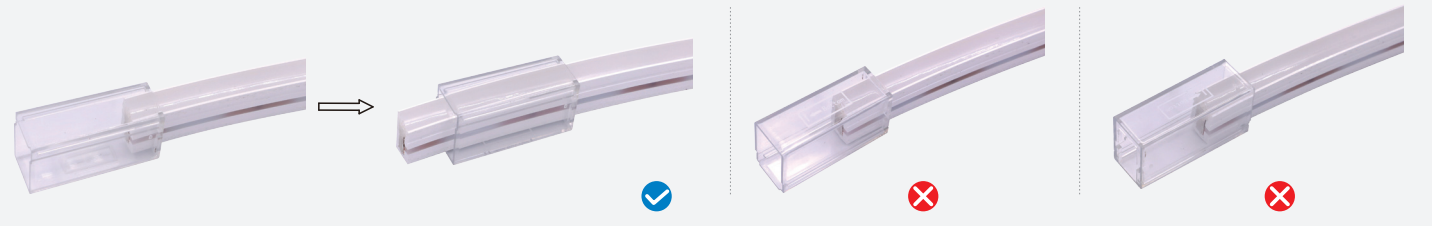

3.Install stainless steel inner clips

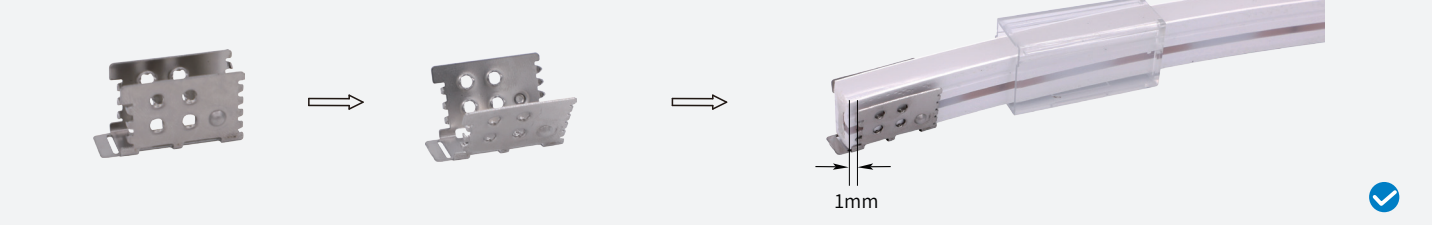


4.Install terminal connector

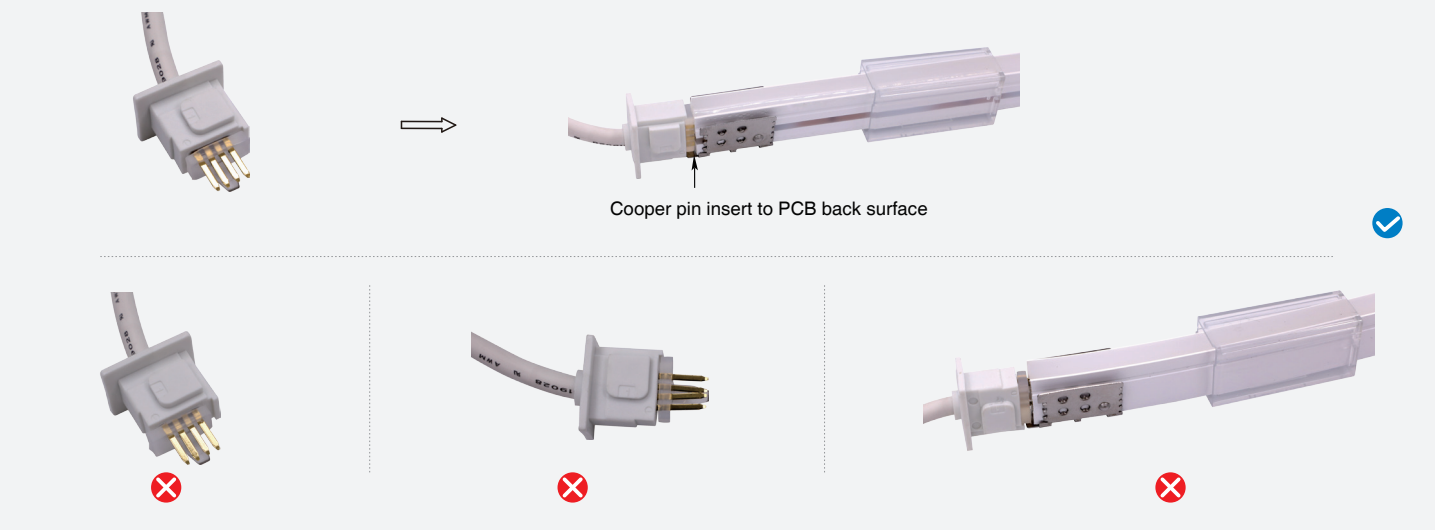

5.Connector 24V DC power supply to testing connection success

6.Install middle clips

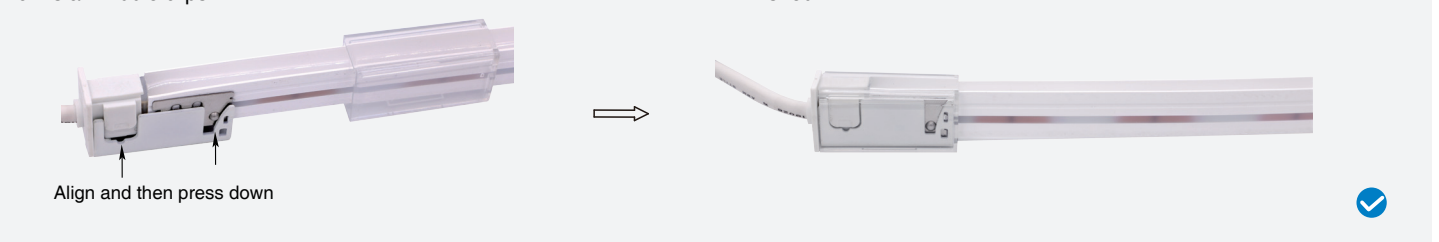

7.Finished

8.End Cap installation refer to figure 2-7